




DVW-5Z: User Guide

Featured Operating Modes

- Sound Activation - Responds to sound/music.
- Static Display - Remain a single color.
- Auto Mode - Chase through different patterns
- DMX Control - Standard DMX 512 Address

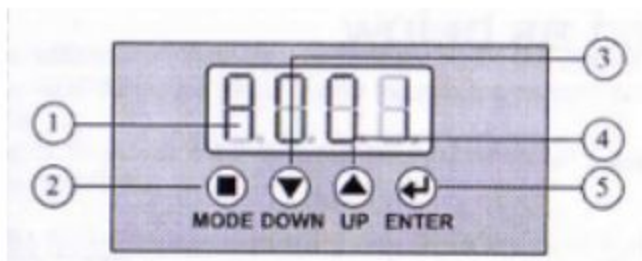

1. Digital Display
2. **Mode:** Select mode or return to previous menu.
3. **Down:** Modify setting up in numeric value.
4. **Up:** Modify setting down in numeric value.
5. **Enter:** Select option and proceed to sub- menu

DMX512 - 11 Channels Description

- CH 1 - Red Dimmer
- CH 2 - Green Dimmer
- CH 3 - Blue Dimmer
- CH 4 - White Dimmer
- CH 5 - Amber Dimmer
- CH 6 - Zoom
- CH 7 - Dimming Mode Selection
 - Set Dimming Mode (0 -9)
 - No Fade Dimming (10 - 50)
 - Dimming (102 - 255)
- CH 8 - Color Intensity Dimmer
- CH 9 - Strobe Control
- CH 10 - Speciality Dimmer
 - Color Jump (10 - 50)
 - Color Gradual (51 - 100)
 - Color Pulse (101 - 150)
 - Color Jump/Gradual/Pulse (151 - 200)
 - Sound Control (201 - 255)
- CH 11 - Function Speed (1 - 255)

LED Operating Menu:

- d000 - 7 Channel Mode (001 - 512)
- d.000 - 11 Channel Mode (001 - 512)
- CC01 - Color Jump Mode (01 - 99)
- CP01 - Color Change Mode (01 - 99)
- dE01 - Color Pulse (01 - 99)
- dENo - Color Jump/Gradual/Pulse (01 - 99)
- bEbE - Sound Activated
- R000 - Red (0 - 255)
- G000 - Green (0 - 255)
- B000 - Blue (0 - 255)
- W000 - White (0 - 255)
- A000 - Amber (0 - 255)
- Y000 - Zoom
- Dr01 - 5 Dimming Mode
 - 1 - Linear Dimming
 - 2 - Not Fade
 - 3 - Low Algorithm
 - 4 - Normal Linear (Slow)
 - 5 - Low Algorithm Normal Linear (Slow)

DMX512 - 7 Channel Description

- Ch 1 - Red Dimmer
- Ch 2 - Green Dimmer
- Ch 3 - Blue Dimmer
- Ch 4 - White Dimmer
- Ch 5 - Amber Dimmer
- Ch 6 - Zoom
- Ch 7 - Dimming Mode Selection
 - Set Dimming (0 - 9)
 - Model 1 Linear (10 - 50)
 - Model 2 No Fade (51 - 101)
 - Model 3 Dimming (102 - 152)
 - Model 4 Dimming (153 - 203)
 - Model 5 Dimming (204 - 255)



Pro Tip: Version 1.0 has the d.000 function, while Version 2.0 has both d000 and d.000 functions.