

ECLIPSEPARFC

CHANNELS DMX

1 CHANNEL

MODE 1 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255

2 CHANNELS

MODE 2 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255

4 CHANNELS

MODE 4 Ch 1	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	CTO 2800K -3200K 3200K-3500 K 3500K-4000K 4000K-4500K 4500K-5000K 5000K-5600K 5600K-6000K 6000K-6500K	000 - 031 032 - 063 064 - 095 096 - 127 128 - 159 160 - 191 192 - 223 224 - 255
3	HUE 0 -25~25	000 - 000 001 - 255
4	DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255

5 CHANNELS

MODE 5 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	CTO 2800K -3200K 3200K-3500 K 3500K-4000K 4000K-4500K 4500K-5000K 5000K-5600K 5600K-6000K 6000K-6500K	000 - 031 032 - 063 064 - 095 096 - 127 128 - 159 160 - 191 192 - 223 224 - 255
3	HUE 0 -25~25	000 - 000 001 - 255
4	STROBE NO Function Strobe Slow to Fast	000 - 010 011 - 255
5	DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255

ECLIPSEPARFC

6 CHANNELS

MODE 6 Ch 1	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	CTO 2800K -3200K 3200K-3500 K 3500K-4000K 4000K-4500K 4500K-5000K 5000K-5600K 5600K-6000K 6000K-6500K	000 - 031 032 - 063 064 - 095 096 - 127 128 - 159 160 - 191 192 - 223 224 - 255
3	HUE 0 -25~25	000 - 000 001 - 255
4	STROBE NO Function Strobe Slow to Fast	000 - 010 011 - 255
5	COLOR MACRO No Function Amber Shift on Color Macro	000 - 002 003 - 005 006 - 255
6	DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255

10 CHANNELS

MODE 10 Ch 1	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	WHITE 0~100%	000 - 255
6	CTO 2800K-3200K 3200K-3500K 3500K-4000K 4000K-4500K 4500K-5000K 5000K-5600K 5600K-6000K 6000K-6500K No Function	000 - 030 031 - 060 061 - 090 091 - 120 121 - 150 151 - 180 181 - 210 211 - 240 241 - 255
7	HUE 0 -25~25	000 - 000 001 - 255
8	STROBE NO Function Strobe Slow to Fast	000 - 010 011 - 255
9	COLOR MACRO No Function Amber Shift on Color Macro	000 - 002 003 - 005 006 - 255
10	DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255

ECLIPSEPARFC

15 CHANNELS

MODE 15 Ch 1	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	DIMMER FINE 0~100%	000 - 255
3	RED 0~100%	000 - 255
4	RED FINE 0~100%	000 - 255
5	GREEN 0~100%	000 - 255
6	GREEN FINE 0~100%	000 - 255
7	BLUE 0~100%	000 - 255
8	BLUE FINE 0~100%	000 - 255
9	WHITE 0~100%	000 - 255
10	WHITE FINE 0~100%	000 - 255
11	CTO 2800K-3200K 3200K-3500K 3500K-4000K 4000K-4500K 4500K-5000K 5000K-5600K 5600K-6000K 6000K-6500K No Function	000 - 030 031 - 060 061 - 090 091 - 120 121 - 150 151 - 180 181 - 210 211 - 240 241 - 255
12	HUE 0 -25~25	000 - 000 001 - 255
13	STROBE NO Function Strobe Slow to Fast	000 - 010 011 - 255
14	COLOR MACRO No Function Amber Shift on Color Macro	000 - 002 003 - 005 006 - 255
15	DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255

4 CHANNELS

MODE 4 Ch 2	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	GREEN 0~100%	000 - 255
3	BLUE 0~100%	000 - 255
4	WHITE 0~100%	000 - 255

6 CHANNELS

MODE 6 Ch 2	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	WHITE 0~100%	000 - 255
6	STROBE NO Function Strobe Slow to Fast	000 - 010 011 - 255

ECLIPSEPARFC

10 CHANNELS

MODE 10 Ch 2	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	WHITE 0~100%	000 - 255
6	STROBE NO Function Strobe Slow to Fast	000 - 010 011 - 255
7	COLOR TEMPERATURE No Function 2800K 3200K 3500K 4000K 4500K 5000K 5600K 6000K 6500K No Function	000 - 005 006 - 030 031 - 055 056 - 080 081 - 105 106 - 130 131 - 155 156 - 180 181 - 205 206 - 230 231 - 255
8	AUTO PROGRAMS No Function Auto Program 1 Auto Program 2 Auto Program 3 Auto Program 4 Auto Program 5 (Auto Program1-4)	000 - 010 011 - 060 061 - 110 111 - 160 161 - 210 211 - 255
9	AUTO SPEED Auto speed slow to fast	000 - 255
10	DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255

15 CHANNELS

MODE 15 Ch 2	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	DIMMER FINE 0~100%	000 - 255
3	RED 0~100%	000 - 255
4	RED FINE 0~100%	000 - 255
5	GREEN 0~100%	000 - 255
6	GREEN FINE 0~100%	000 - 255
7	BLUE 0~100%	000 - 255
8	BLUE FINE 0~100%	000 - 255
9	WHITE 0~100%	000 - 255
10	WHITE FINE 0~100%	000 - 255
11	STROBE NO Function Strobe Slow to Fast	000 - 010 011 - 255
12	COLOR TEMPERATURE No Function 2800K 3200K 3500K 4000K 4500K 5000K 5600K 6000K 6500K No Function	000 - 005 006 - 030 031 - 055 056 - 080 081 - 105 106 - 130 131 - 155 156 - 180 181 - 205 206 - 230 231 - 255
13	AUTO PROGRAMS No Function Auto Program 1 Auto Program 2 Auto Program 3 Auto Program 4 Auto Program 5 (Auto Program1-4)	000 - 010 011 - 060 061 - 110 111 - 160 161 - 210 211 - 255
14	AUTO SPEED Auto speed slow to fast	000 - 255
15	DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255

4 COLORS FIXTURES: ECLIPSEPARFC, MINIECLIPSEFC, ECLPANELTWC800
NEW DMX CHART TO INSERT INSIDE THEATRE SECTION

17CH	Function	Value	Percent/Setting	Remark
1	Dimmer	000-255	0~100%	FOR LAYER 1 AND LAYER 2
2	Dimmer Fine	000-255	0~100%	FOR LAYER 1 AND LAYER 2
3	Strobe	000-030 031-100 101-130 131-200 201-255	No function (shutter open) Strobe effect slow to fast No function (shutter open) Random strobe effect slow to fast No function (shutter open)	FOR LAYER 1 AND LAYER 2
4	CTO	000-030 031-060 061-090 091-120 121-150 151-180 181-210 211-255	2800K-3200K 3200K-3500K 3500K-4000K 4000K-4500K 4500K-5000K 5000K-5600K 5600K-6000K 6000K-6500K	FOR LAYER 1
5	HUE	000-126 127-127	No Function -25 to 0 0 to +25	FOR LAYER 1
6	Crossfade	128-255 000-255	0~100%	FOR LINEARY SWITCH BETWEEN LAYER 1 AND LAYER 2
7	Red	000-255	0~100%	FOR LAYER 2
8	Red Fine	000-255	0~100%	FOR LAYER 2
9	Green	000-255	0~100%	FOR LAYER 2
10	Green Fine	000-255	0~100%	FOR LAYER 2
11	Blue	000-255	0~100%	FOR LAYER 2
12	Blue Fine	000-255	0~100%	FOR LAYER 2
13	White	000-255	0~100%	FOR LAYER 2
14	White Fine	000-255	0~100%	FOR LAYER 2
15	Color Macro	000-002 003-005 006-255	No Function Amber Shift on Color Macro	FOR LAYER 2
16	CTO on colors	000-255	0~100%	FOR LAYER 2
17	Dimmer Speed Mode	000-051 052-101 102-152 153-203 204-255	Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	FOR LAYER 1 AND LAYER 2