

MINIECLFRFC

CHANNELS DMX

1 CHANNEL

MODE 1 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255

2 CHANNELS

MODE 2 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	DIMMER FINE 0~100%	000 - 255

3 CHANNELS

MODE 3 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	CTO 2800 K -3200K 3200 K-4200 K 4200 K-5500K 5500 K-6000K 6000 K-8000K	000-051 052-102 103-153 154-204 205-255
3	DIMMER FADE 0~100%	000 - 255

4 CHANNELS

MODE 4 Ch1	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	CTO 2800 K -3200K 3200 K-4200 K 4200 K-5500K 5500 K-6000K 6000 K-8000K	000-051 052-102 103-153 154-204 205-255
3	STROBE No Function Strobe slow to fast	000 - 010 011 - 255
4	DIMMER FADE 0~100%	000 - 255

5 CHANNELS

MODE 5 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	CTO 2800 K -3200K 3200 K-4200 K 4200 K-5500K 5500 K-6000K 6000 K-8000K	000-051 052-102 103-153 154-204 205-255
3	STROBE No Function Strobe slow to fast	000 - 010 011 - 255
4	COLOR MACRO No Function Amber Shift on Color Macro	000-002 003-005 006-255
5	DIMMER FADE 0~100%	000 - 255

MINIECLFRFC

9 CHANNELS

MODE 9 Ch 1	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	LIME 0~100%	000 - 255
6	CTO 2800 K -3200K 3200 K-4200 K 4200 K-5500K 5500 K-6000K 6000 K-8000K No Function	000-042 043-084 085-126 127-168 169-210 211-255
7	STROBE No Function Strobe slow to fast	000 - 010 011 - 255
8	COLOR MACRO No Function Amber Shift on Color Macro	000-002 003-005 006-255
9	DIMMER FADE 0~100%	000 - 255

4 CHANNELS

MODE 4 Ch 2	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	GREEN 0~100%	000 - 255
3	BLUE 0~100%	000 - 255
4	LIME 0~100%	000 - 255

14 CHANNELS

MODE 14 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	DIMMER FINE 0~100%	000 - 255
3	RED 0~100%	000 - 255
4	RED FINE 0~100%	000 - 255
5	GREEN 0~100%	000 - 255
6	GREEN FINE 0~100%	000 - 255
7	BLUE 0~100%	000 - 255
8	BLUE FINE 0~100%	000 - 255
9	LIME 0~100%	000 - 255
10	LIME FINE 0~100%	000 - 255
11	CTO 2800 K -3200K 3200 K-4200 K 4200 K-5500K 5500 K-6000K 6000 K-8000K No Function	000-042 043-084 085-126 127-168 169-210 211-255
12	STROBE No Function Strobe slow to fast	000 - 010 011 - 255
13	COLOR MACRO No Function Amber Shift on Color Macro	000-002 003-005 006-255
14	DIMMER FADE 0~100%	000 - 255

MINIECLFRFC

6 CHANNELS

MODE 6 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	LIME 0~100%	000 - 255
6	DIMMER FADE 0~100%	000 - 255

9 CHANNELS

MODE 9 Ch 2	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	RED FINE 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	GREEN FINE 0~100%	000 - 255
5	BLUE 0~100%	000 - 255
6	BLUE FINE 0~100%	000 - 255
7	LIME 0~100%	000 - 255
8	LIME FINE 0~100%	000 - 255
9	DIMMER FADE 0~100%	000 - 255

12 CHANNELS

MODE 12 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	DIMMER FINE 0~100%	000 - 255
3	RED 0~100%	000 - 255
4	RED FINE 0~100%	000 - 255
5	GREEN 0~100%	000 - 255
6	GREEN FINE 0~100%	000 - 255
7	BLUE 0~100%	000 - 255
8	BLUE FINE 0~100%	000 - 255
9	LIME 0~100%	000 - 255
10	LIME FINE 0~100%	000 - 255
11	STROBE No Function Strobe slow to fast	000 - 010 011 - 255
14	DIMMER FADE 0~100%	000 - 255

7 CHANNELS

MODE 7 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	LIME 0~100%	000 - 255
6	STROBE No Function Strobe slow to fast	000 - 010 011 - 255
7	DIMMER FADE 0~100%	000 - 255

4 COLORS FIXTURES: ECLIPSEPARFC, MINIECLIPSEFC, ECLPANELTWC800
NEW DMX CHART TO INSERT INSIDE THEATRE SECTION

17CH	Function	Value	Percent/Setting	Remark
1	Dimmer	000-255	0~100%	FOR LAYER 1 AND LAYER 2
2	Dimmer Fine	000-255	0~100%	FOR LAYER 1 AND LAYER 2
3	Strobe	000-030 031-100 101-130 131-200 201-255	No function (shutter open) Strobe effect slow to fast No function (shutter open) Random strobe effect slow to fast No function (shutter open)	FOR LAYER 1 AND LAYER 2
4	CTO	000-030 031-060 061-090 091-120 121-150 151-180 181-210 211-255	2800K-3200K 3200K-3500K 3500K-4000K 4000K-4500K 4500K-5000K 5000K-5600K 5600K-6000K 6000K-6500K	FOR LAYER 1
5	HUE	000-126 127-127	No Function -25 to 0 0 to +25	FOR LAYER 1
6	Crossfade	128-255 000-255	0~100%	FOR LINEARY SWITCH BETWEEN LAYER 1 AND LAYER 2
7	Red	000-255	0~100%	FOR LAYER 2
8	Red Fine	000-255	0~100%	FOR LAYER 2
9	Green	000-255	0~100%	FOR LAYER 2
10	Green Fine	000-255	0~100%	FOR LAYER 2
11	Blue	000-255	0~100%	FOR LAYER 2
12	Blue Fine	000-255	0~100%	FOR LAYER 2
13	White	000-255	0~100%	FOR LAYER 2
14	White Fine	000-255	0~100%	FOR LAYER 2
15	Color Macro	000-002 003-005 006-255	No Function Amber Shift on Color Macro	FOR LAYER 2
16	CTO on colors	000-255	0~100%	FOR LAYER 2
17	Dimmer Speed Mode	000-051 052-101 102-152 153-203 204-255	Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	FOR LAYER 1 AND LAYER 2