

# MOSAICOJR

8CH	14CH	Scenes Record	Function	Value	Percent/Setting
1	1	1	Shutter	000-031 032-063 064-095 096-127 128-159 160-191 192-223 224-255	Shutter closed No function (shutter open) Shutter effect slow to fast No function (shutter open) Pulse-effect in sequences No function (shutter open) Random Shutter effect slow to fast No function (shutter open)
2	2	2	Dimmer	000-255	0~100%
-	3	-	Dimmer Fine	000-255	0~100%
3	4	3	Color	000-003 004-007 008-011 012-015 016-019 020-023 024-027 028-031 032-035 036-039 040-043 044-047 048-051 052-055 056-059 060-063 064-094 095-096 097-127 128-255	Open Open + Color 1 Color 1 Color 1 + Color 2 Color 2 Color 2 + Color 3 Color 3 Color 3 + Color 4 Color 4 Color 4 + Color 5 Color 5 Color 5 + Color 6 Color 6 Color 6 + Color 7 Color 7 Color 7 + Open Fast to Slow(Forward Spin) Stop (Stop Rotation) Slow to Fast(Revers Spin) Positing from Open to Color 7
4	5	4	Rotating gobo wheel	000-005 006-010 011-015 016-020 021-025 026-030 031-035 036-040 041-055 056-070 071-085 086-100 101-115 116-130 131-145	Open Gobo 1 Gobo 2 Gobo 3 Gobo 4 Gobo 5 Gobo 6 Gobo 7 Gobo 1 Shaking slow to fast Gobo 2 Shaking slow to fast Gobo 3 Shaking slow to fast Gobo 4 Shaking slow to fast Gobo 5 Shaking slow to fast Gobo 6 Shaking slow to fast Gobo 7 Shaking slow to fast

# MOSAICOJR

				146-199 200-201 202-255	Fast to Slow(Forward Spin) Stop (Stop Rotation) Slow to Fast(Revers Spin)
5	6	5	Gobo Rotation	000-191 192-221 222-225 226-255	Positioning from 0-360 degrees(Indexing) Fast to Slow Stop Slow to Fast
6	7	6	Focus	000-255	Focus
-	8	-	Focus Fine	000-255	Focus Fine
7	9	7	Zoom	000-255	Zoom
-	10	-	Zoom Fine	000-255	Zoom Fine
8	-	-	Control	000-059 060-069 070-079 080-089 090-099 100-109 110-119 120-129 130-139 140-199 200-209 210-119 220-229 230-255	No function Enable blackout while color change (Hold 3 Second) Disable blackout while color change (Hold 3 Second) Enable blackout while gobo change (Hold 3 Second) Disable blackout while gobo change (Hold 3 Second) Color Reset (Hold 3 Second) Gobo Reset (Hold 3 Second) Focus Reset (Hold 3 Second) Zoom Reset (Hold 3 Second) No function Reset all (Hold 3 Second) Enable Color/Gobo Move with blackout (Hold 3 Second) Disable Color/Gobo Move with blackout (Hold 3 Second) No function
-	11		Show	000-063 064-127 128-191 192-255	No Function Show 1 Show 2 Show 3
-	12		Chase	000-028 029-056 057-085 086-113 114-141 142-170 171-198 199-226 227-255	No Function Chase 1 Chase 2 Chase 3 Chase 4 Chase 5 Chase 6 Chase 7 Chase 8
-	13		Scene	000-007 008-015 016-023 024-030 031-038 039-046	No Function Scene 1 Scene 2 Scene 3 Scene 4 Scene 5

# MOSAICOJR

				047-054	Scene 6
				055-061	Scene 7
				062-069	Scene 8
				070-077	Scene 9
				078-085	Scene 10
				086-092	Scene 11
				093-100	Scene 12
				101-108	Scene 13
				109-115	Scene 14
				116-123	Scene 15
				124-131	Scene 16
				132-139	Scene 17
				140-146	Scene 18
				147-154	Scene 19
				155-162	Scene 20
				163-170	Scene 21
				171-177	Scene 22
				178-185	Scene 23
				186-193	Scene 24
				194-200	Scene 25
				201-208	Scene 26
				209-216	Scene 27
				217-224	Scene 28
				225-231	Scene 29
				232-239	Scene 30
				240-247	Scene 31
				248-255	Scene 32
-	14	/	Record Scenes	000-010	No Function
				011-128	Edit Scene Mode
				129-255	Record Scene Mode (Hold 3S and Save )