

# PIXIEWASHXB

<b>MODE 15 Ch</b>	<b>MODE 18 Ch</b>	<b>MODE 22 Ch</b>	<b>MODE 23 Ch</b>	<b>FUNCTION</b>	<b>DMX Value</b>
1	1	1	1	<b>PAN COARSE</b> 0~100%	000 - 255
2	2	2	2	<b>PAN FINE</b> 0~100%	000 - 255
3	3	3	3	<b>TILT COARSE</b> 0~100%	000 - 255
4	4	4	4	<b>TILT FINE</b> 0~100%	000 - 255
5	5	5	5	<b>PAN/TILT SPEED</b> Fastest to slow Movement with Blackout	000 - 250 251 - 255
6	6	6	6	<b>SHUTTER</b> No function (shutter open) Shutter effect slow to fast No function (shutter open) Pulse-effect in sequences No function (shutter open) Random Shutter effect slow to fast No function (shutter open)	000 - 010 011 - 082 083 - 093 094 - 163 164 - 174 175 - 244 245 - 255
7	7	7	7	<b>DIMMER 8bit</b> 0~100%	000 - 255
	8	8	8	<b>DIMMER 16bit</b> 0~100%	000 - 255
	9	9	9	<b>DIMMER FADE</b> 0~100%	000 - 255
8	10	10	10	<b>COLOR FUNCTION</b> No Function CTC CTC+Amber Shift Forward Spin Reverse Spin Continuous TBD	000 - 015 016 - 023 024 - 031 032 - 047 048 - 063 064 - 079 080 - 255

PIXIEWASHXB

MODE 15 Ch	MODE 18 Ch	MODE 22 Ch	MODE 23 Ch	FUNCTION	DMX Value				
9	11	11	11	<b>CTC or CTC+AMBER SHIFT</b>					
				2800K	000-000				
				3000K	001-010				
				3200K	011-020				
				3400K	021-030				
				3600K	031-040				
				3800K	041-050				
				4000K	051-060				
				4200K	061-070				
				4400K	071-080				
				4600K	081-090				
				4800K	091-100				
				5000K	101-110				
				5200K	111-120				
				5400K	121-130				
				5600K	131-140				
				5800K	141-150				
				6000K	151-160				
				6200K	161-170				
				6400K	171-180				
				6600K	181-190				
				6800K	191-200				
				7000K	201-210				
				7200K	211-220				
				7400K	221-230				
				7600K	231-240				
				7800K	241-250				
				8000K	251-255				
								<b>COLOR(FW spin)</b>	
								Rainbow Effect (Slow to Fast)	000 - 255
								<b>COLOR(RW spin)</b>	
								Rainbow Effect (Slow to Fast)	000 - 255
								<b>COLOR (Continuous)</b>	
								Black	000 - 000
								Red	001 - 001
								Green	002 - 002
				Blue	003 - 003				
				Warm White	004 - 004				
				Red=0, Green->up, Blue=full, Warm White=0	005 - 046				
				Red=0, Green=full, Blue->down, Warm White=0	047 - 088				
				Red->up, Green=full, Blue=0, Warm White=0	089 - 130				
				Red=full, Green->down, Blue=0, Warm White=0	131 - 172				
				Red=full, Green=0, Blue->up, Warm White=0	173 - 214				
				Red->down, Green=0, Blue=full, Warm White=0	215 - 255				
				<b>COLOR(CTC)</b>					
				0~100%	000 - 255				

# PIXIEWASHXB

<b>MODE 15 Ch</b>	<b>MODE 18 Ch</b>	<b>MODE 22 Ch</b>	<b>MODE 23 Ch</b>	<b>FUNCTION</b>	<b>DMX Value</b>
			12	<b>HUE</b> 25~25	000 - 255
10	12	12	13	<b>RED</b> 0~100%	000 - 255
		13	14	<b>RED FINE</b> 0~100%	000 - 255
11	13	14	15	<b>GREEN</b> 0~100%	000 - 255
		15	16	<b>GREEN FINE</b> 0~100%	000 - 255
12	14	16	17	<b>BLUE</b> 0~100%	000 - 255
		17	18	<b>BLUE FINE</b> 0~100%	000 - 255
13	15	18	19	<b>WARM WHITE</b> 0~100%	000 - 255
		19	20	<b>WARM WHITE FINE</b> 0~100%	000 - 255
14	16	20	21	<b>ZOOM</b> 0~100%	000 - 255
	17	21	22	<b>ZOOM FINE</b> 0~100%	000 - 255
15	18	22	23	<b>COLOR FUNCTION</b> No function Reset all Pan&Tilt Reset TBD Zoom Reset TBD(not used)	000 - 007 008 - 015 016 - 023 034 - 047 048 - 055 056 - 255

## CANALI DMX

MODE 13 Ch	MODE 16 Ch	FUNCTION	DMX Value
1	1	<b>PAN</b> 0~100%	000 - 255
2	2	<b>PAN FINE</b> 0~100%	000 - 255
3	3	<b>TILT</b> 0~100%	000 - 255
4	4	<b>TILT FINE</b> 0~100%	000 - 255
5	5	<b>PAN/TILT SPEED</b> Fast to slow	000 - 255
6	6	<b>SPECIAL FUNCTION</b> No Function Pan & Tilt Reset (Hold 3 second) No Function Zoom Reset (Hold 3 Seconds) No Function	000 - 049 050 - 099 100 - 149 150 - 199 200 - 255
7	7	<b>DIMMER</b> 0~100%	000 - 255
8	8	<b>SHUTTER</b> Shutter Closed No Function (Shutter Open) Strobe Effect (Slow to Fast) No Function (Shutter Open) Pulse - Effect in sequences No Function (Shutter Open) Random Strobe Effect (Slow to Fast) No Function (Shutter Open)	000 - 031 032 - 063 064 - 095 096 - 127 128 - 159 160 - 191 192 - 223 224 - 255
9	9	<b>RED</b> 0~100%	000 - 255
10	10	<b>GREEN</b> 0~100%	000 - 255
11	11	<b>BLUE</b> 0~100%	000 - 255
12	12	<b>WHITE</b> 0~100%	000 - 255
	13	<b>COLOR FUNCTION</b> No Function CTC Function Forward Spin	000 - 019 020 - 039 040 - 059

MODE	MODE	FUNCTION	DMX Value
13 Ch	16 Ch		
	13	Reverse Spin Continuos TBD	060 - 079 080 - 099 100 - 255
	14	<b>COLOR</b> Color Temperature Correction 2000K --> 3000K White 3200 K White 4200 K White 5600 K White 8000 K <b>FORWARD SPIN</b> Rainbow Effect (Slow to Fast) <b>REVERSE SPIN</b> Rainbow Effect (Slow to Fast) <b>CONTINUOS</b> Black Red Green Blue White Red=0; Green ->Up; Blue=Full; White=0 Red=0; Green =Full; Blue->Down; White=0 Red->Up; Green=Full; Blue=0; White=0 Red=Full; Green ->Down; Blue=0; White=0 Red=Full; Green=0; Blue->Up; White=0 Red->Down; Green=0; Blue=Full; White=0	000 - 223 224 - 231 232 - 239 240 - 247 248 - 255 000 - 255 000 - 255 000 - 000 001 - 001 002 - 002 003 - 003 004 - 004 005 - 046 047 - 088 089 - 130 131 - 172 173 - 214 215 - 255
13	15	<b>ZOOM</b> 0~100%	000 - 255
	16	<b>DIMMER MODE</b> Preset Dimmer Speed from Display Menu Dimmer Speed Mode Off Dimmer Speed Mode 1 (Fast Speed) Dimmer Speed Mode 2 (Middle Speed) Dimmer Speed Mode 3 (Slow Speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255