

DMX CONTROL

5 CHANNELS

MODE 5 Ch	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	GREEN 0~100%	000 - 255
3	BLUE 0~100%	000 - 255
4	WHITE 0~100%	000 - 255
5	ZOOM 0~100%	000 - 255

7 CHANNELS

MODE 7 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	WHITE 0~100%	000 - 255
6	STROBE	
	No Function (shutter open)	000 - 030
	Slow to fast	031 - 100
	No Function (shutter open)	101 - 130
7	Random slow to fast	131 - 200
	No Function (shutter open)	201 - 255
7	ZOOM 0~100%	000 - 255

11 CHANNELS

MODE 11 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	WHITE 0~100%	000 - 255
6	STROBE	
	No Function (shutter open)	000 - 030
	Slow to fast	031 - 100
	No Function (shutter open)	101 - 130
7	ZOOM	
	0~100%	000 - 255
	COLOR FUNCTION	
	No Function	000 - 010
8	Color presets	011 - 085
	CTC	086 - 130
	CTC+Amber Shift	131 - 170
	Effects	171 - 255
9	COLOR PRESETS	
	R 100%, G 0~100%, B 0%	000 - 028
	R 100%~0%, G 100%, B 0%	029 - 056
	R 0%, G 100%, B 0~100%	057 - 084
	R 0% G 100%~0% B 100%	085 - 112
	R 0%~100% G 0% B 100%	113 - 140
	R 100% G 0% B 100%~0%	141 - 168
	R 100% G 0%~100% B 0%~100%	169 - 196
R 100%~0% G 100%~0% B 100%	197 - 224	
R 100% G 100% B 100% W 100%	225 - 255	

11 CHANNELS

MODE 11 Ch	FUNCTION	DMX Value
10	CTC Or CTC+Amber Shift	
	2800K	000 - 000
	3000K	001 - 010
	3200K	011 - 020
	3400K	021 - 030
	3600K	031 - 040
	3800K	041 - 050
	4000K	051 - 060
	4200K	061 - 070
	4400K	071 - 080
	4600K	081 - 090
	4800K	091 - 100
	5000K	101 - 110
	5200K	111 - 120
	5400K	121 - 130
	5600K	131 - 140
	5800K	141 - 150
	6000K	151 - 160
	6200K	161 - 170
	6400K	171 - 180
6600K	181 - 190	
6800K	191 - 200	
7000K	201 - 210	
7200K	211 - 220	
7400K	221 - 230	
7600K	231 - 240	
7800K	241 - 250	
8000K	251 - 255	
11	EFFECTS	
	Effects 1	000 - 060
	Effects 2	061 - 110
	Effects 3	111 - 160
	Effects 4	161 - 210
Effects 5 (Effects1- 4)	211 - 255	
10	EFFECTS SPEED	
	Effects speed slow to fast	000 - 255
10	HUE	
	-25~25 (Ch8. is 86-130 and 131-170)	000 - 255
11	DIMMER FADE	
	Preset dimmer speed from display menu 0~100%	000 - 000 001 - 255