

DMX Operation

Channel		Value	Function
9CH	11CH		
CH1	CH1	000-255	Pan reverse
	CH2	000-255	Pan Fine
CH2	CH3	000-255	Tilt reverse
	CH4	000-255	Tilt reverse
CH3	CH5	000-127	Color to select ↓
		128-189	Color Wheel run from fast to slow
		190-193	Color Wheel stop
		194-255	Color Wheel run from slow to fast
CH4	CH6	000-063	Gobo select
		064-127	Gobo sake select
		128-189	Gobo Wheel run from slow to fast
		190-193	Gobo stop
		194-255	Gobo Wheel run from slow to fast
CH5	CH7	000-007	Closed light
		008-015	Turn on the light
		016-131	Strobe speed from slow to fast
		132-139	Turn on the light
		140-181	The light turn off fast to turn on slow
		182-189	Turn on the light
		190-231	The light turn on fast to turn off slow
		232-239	Turn on the light
		240-247	Strobe
248-255	Turn on the light		
CH6	CH8	000-255	Dimmer:0-100%
CH7	CH9	000-255	Pan/Tilt speed control, the run speed from fast to slow
CH8	CH10	000-069	No Function
		070-079	When pan/Tilt running, the light turn off
		080-089	No Function
		090-099	When the color wheel of running, the light turn off
		100-109	No Function
		110-119	When the gobo wheel of running, the light turn off
		120-199	No Function
		200-209	Reset
		210-249	No Function
		250-255	Sound active mode
CH9	CH11	000-020	Standard Dimmer
		021-040	Stage Dimmer
		041-060	TV Dimmer
		061-080	Architectural Dimmer
		081-100	Theatrical Dimmer
		101-255	Tacitly approve Dimmer