 


Operate Function :

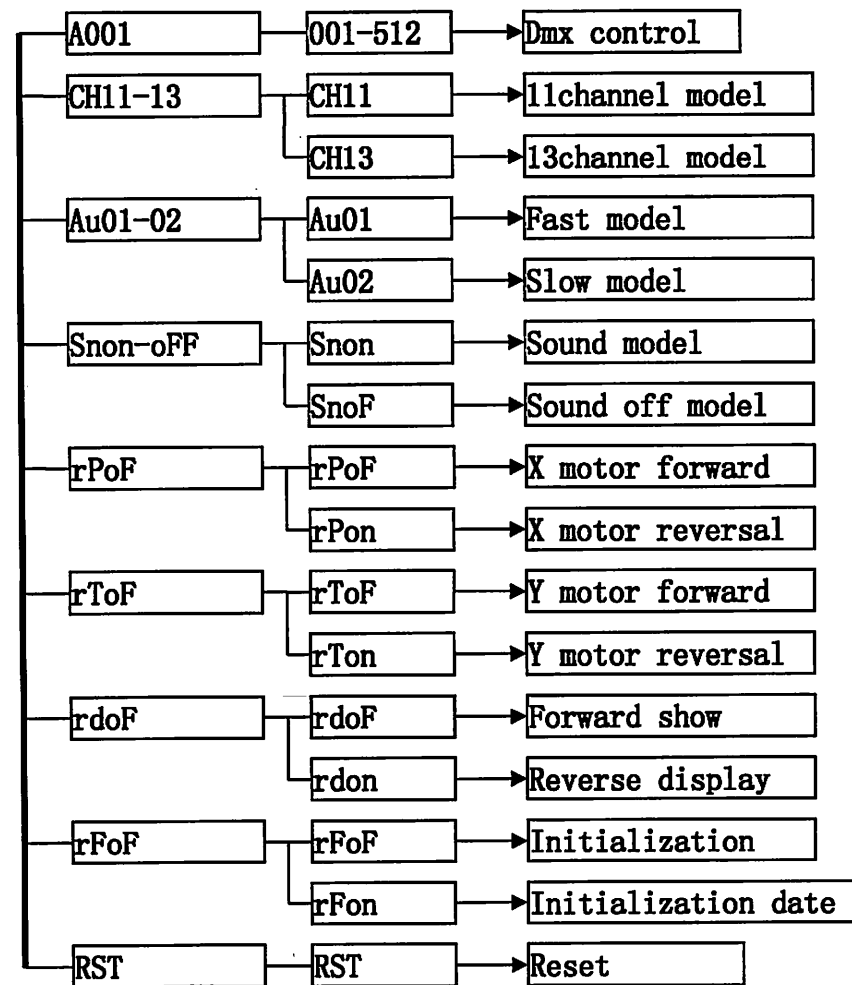


DMX 512 Function: 13 Channel mode

Channel		Function
1	0-255	Level
2	0-255	Level of fine-tuning
3	0-255	Vertical
4	0-255	Vertical of fine-tuning
5	0-255	Speed
6	0-255	Dimming
7	0-255	Strobe
8	0-255	Red dimming
9	0-255	Green dimming
10	0-255	Blue dimming
11	0-255	White dimming
12	0-255	Self-propelled
13	150-250	Reset


11 Channel Mode

Channel		Function
1	0-255	Level
2	0-255	Level of fine-tuning
3	0-255	Vertical
4	0-255	Vertical of fine-tuning
5	0-255	Speed
6	0-255	Dimming
7	0-255	Strobe
8	0-255	Red dimming
9	0-255	Green dimming
10	0-255	Blue dimming
11	0-255	White dimming

 User's Manual

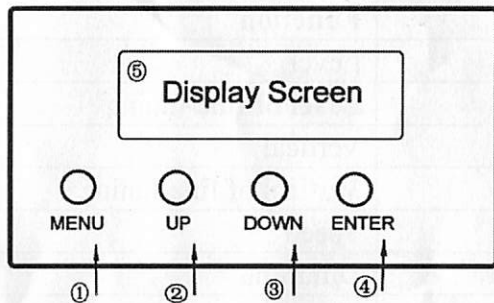

 1.MENU 2.UP 3.DOWN 4.ENTER (Confirm button) 5.Display Screen

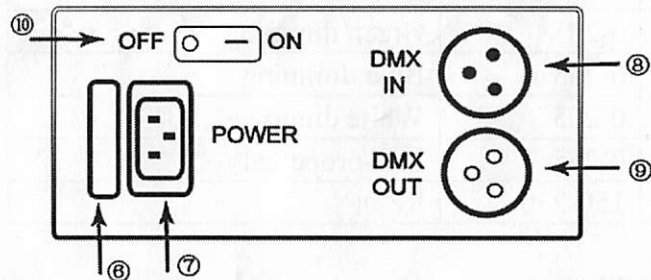

6.FUSE 7.POWER IN 8.DMX IN 9.DMX OUT 10.Switch

"rSt" is displayed after the power is plugged in and the switch is opened. The moving head light is resetting. Please do not operate.

The step to start the Auto mode:

1. Press "MENU" to find "Au01", and press "ENTER".
2. Press "UP" or "DOWN" to select "Au01" or "Au02", and press "ENTER".

The step to start the Sound Active mode:

1. Press "MENU" to find "Snon", and press "ENTER".
2. Press "UP" or "DOWN" to select "Snon", and press "ENTER".

LED Stage Lighting Operating Manual

MOVING HEAD LIGHT



Please Read This Manual before Operating the Light