DMX Channel Information (5 Ch):

Channel	Channel values	Function
1channel	0	Closed
	1-255	Red dimmer
2 channel	0	Closed
	1-255	Green dimmer
3channel	0	Closed
	1-255	Blue dimmer
4Channel	0	Closed
	1-255	White dimmer
5Channel	0	Closed
	1-255	Amber dimmer

DMX Channel Information(12CH):

12 Channel table			
Channel	Channel Value	Function description	
CH1	0-15	Closed	
	16-255	All Dimmer	
CH2	0	Closed	
	1-255	Strobe from slow to fast	
СНЗ	0	Closed	
	1-255	Red Dimmer	
CH4	0	Closed	
	0-255	Green Dimmer	
CH5	0	Closed	
	1-255	Blue Dimmer	
CH6	0	Closed	
	1-255	White Dimmer	
CH7	0	Closed	
	1-255	Amber Dimmer	
CH8	0	Closed	
	1-255	Choose the mixed color effect	
CH9	0	Closed	
	1-255	Speed for mixed color effect	
CH10	0	Closed	
	1-255	Mixed color fade	
CH11	0	Closed	
	1-255	Speed for mixed color fade	
CH12	0	Closed	
	1-255	Sound control	