

61-70	LIVE
71-80	STUDIO
81-90	POWER
91-100	RESERVED
101-110	DIMMER DIM1
111-120	DIMMER DIM3
121-130	DIMMER DIM2
131-141	DIMMER DIM4
141-150	DIMMER OFF
151-160	1200Hz
161-170	2400Hz
171-180	6000Hz
181-190	6000Hz
191-200	20000Hz
201-210	ALL RESET
211-220	XY RESET
221-230	ZOOM RESET
231-255	RESERVED

CH19	CH21	CH28	180-189	NO FUNCTION
			190-255	RANDOM STROBE
			CONTROL	EXECUTE AFTER 3 SECONDS
			0-10	NO FUNCTION
			11-20	PAN/TILT BLACK ACTIVATED
			21-30	PAN/TILT BLACK DEACTIVATED
			31-40	PAN INVERT
			41-50	TILT INVERT
			51-60	PAN/TILT INVERT OFF
			61-70	LIVE
			71-80	STUDIO
			81-90	POWER
			91-100	RESERVED
			101-110	DIMMER DIM1
			111-120	DIMMER DIM3
			121-130	DIMMER DIM2
			131-141	DIMMER DIM4
			141-150	DIMMER OFF
			151-160	1200Hz
			161-170	2400Hz
			171-180	6000Hz
			181-190	6000Hz
			191-200	20000Hz
			201-210	ALL RESET
			211-220	XY RESET
			221-230	ZOOM RESET
			231-255	RESERVED

31-40	PAN INVERT
41-50	TILT INVERT
51-60	PAN/TILT INVERT OFF
61-70	LIVE
71-80	STUDIO
81-90	POWER
91-100	RESERVED
101-110	DIMMER DIM1
111-120	DIMMER DIM3
121-130	DIMMER DIM2
131-141	DIMMER DIM4
141-150	DIMMER OFF
151-160	1200Hz
161-170	2400Hz
171-180	6000Hz
181-190	6000Hz
191-200	20000Hz
201-210	ALL RESET
211-220	XY RESET
221-230	ZOOM RESET
231-255	RESERVED

181-190	6000Hz
191-200	20000Hz
201-210	ALL RESET
211-220	XY RESET
221-230	ZOOM RESET
231-255	RESERVED