

3.14 DMX CONTROL

6 CHANNELS

MODE 6 Ch	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	GREEN 0~100%	000 - 255
3	BLUE 0~100%	000 - 255
4	AMBER 0~100%	000 - 255
5	WHITE 0~100%	000 - 255
6	PURPLE 0~100%	000 - 255

11 CHANNELS

MODE 11 Ch	FUNCTION	DMX Value	
1	RED 0~100%	000 - 255	
2	GREEN 0~100%	000 - 255	
3	BLUE 0~100%	000 - 255	
4	AMBER 0~100%	000 - 255	
5	WHITE 0~100%	000 - 255	
6	PURPLE 0~100%	000 - 255	
7	COLOR MACRO No Function Color Macros	000 - 015 016 - 255	
8	STROBE No Function Strobe slow to fast	000 - 015 016 - 255	
	PROGRAM SPEED Speed slow to fast	000 - 255	
	SOUND SENSITIVITY Sound sensitivty OFF Control the sound sensitivity	000 - 010 011 - 255	
9	PROGRAMS No function 0 - 100% 100%-0 100%-0-100% Colors Fade 6 Colors snap 63 Colors snap Sound Control	000 - 031 032 - 063 064 - 095 096 - 127 128 - 159 160 - 191 192 - 223 224 - 255	
	10	DIMMER 0~100%	000 - 255
	11	DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode 1 (fast speed) Dimmer speed mode 2 (middle speed) Dimmer speed mode 3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255