

16CH Channels Control Illustration

Item	Channels	DMX Address	Content
1	Pan	0-255	0-540 degree
2	Tilt	0-255	0-270 degree
3	Pan fine	0-255	0-2.1°
4	Tilt fine	0-255	0-1.0°
5	Speed of pan/tilt	0-255	Fast-slow
6	Foggy lens	0-255	No function to foggy effect
7	Strobe	0	off
		1-50	on
		51-240	Strobe from slow to fast
		241-255	on
		0-255	Off light
8	Dinner	0-8	White light
		8-15	Color 1
		16-23	Color 2
		24-31	Color 3
		32-39	Color 4
		40-47	Color 5
		48-55	Color 6
		56-63	Color 7
		64-71	Color 8
		72-79	Color 9
		80-87	Color 10
		88-95	Color 11
		96-103	Color 12
		104-111	Color 13
112-127	Color 14		
9	Color	128-191	Rainbow effect, clockwise from fast to slow
		192-255	Rainbow effect, anticlockwise from slow to fast
		0-255	Color adjustment
10	Color adjustment	0-6	White light
		7-13	Gobo 1
		14-20	Gobo 2
		21-27	Gobo 3
		28-34	Gobo 4
		35-41	Gobo 5
		42-48	Gobo 6
		49-55	Gobo 7
		56-62	Gobo 8
		63-69	Gobo 9
		70-76	Gobo 10
77-83	Gobo 11		
11	Gobo	84-90	Gobo 12
		91-97	Gobo 13
		98-104	Gobo 14
		105-111	Gobo 15
		112-118	Gobo 16
		119-127	Gobo 17
		128-191	Rainbow effect, clockwise from slow to fast
		192-255	Rainbow effect, anti clockwise from slow to fast
		0-255	0-400°
		0-191	Near to far
		0-31	No prism
32-255	prism		
0-127	angle		
128-191	Clockwise from fast to slow		
192-255	Anti clockwise from slow to fast		
0-99	No function		
100-105	Off light		
106-199	No function		
200-205	On light		
206-254	No function		
255	Reset after 3 to 5 seconds		

16CH Channels Control Illustration

Item	Channels	DMX Address	Content		
11	Gobo	84-90	Gobo 12		
		91-97	Gobo 13		
		98-104	Gobo 14		
		105-111	Gobo 15		
		112-118	Gobo 16		
		119-127	Gobo 17		
		128-191	Rainbow effect, clockwise from slow to fast		
		192-255	Rainbow effect, anti clockwise from slow to fast		
		0-255	0-400°		
		0-191	Near to far		
		0-31	No prism		
32-255	prism				
0-127	angle				
128-191	Clockwise from fast to slow				
192-255	Anti clockwise from slow to fast				
0-99	No function				
100-105	Off light				
106-199	No function				
200-205	On light				
206-254	No function				
255	Reset after 3 to 5 seconds				
12	Gobo shake	0-255	0-400°		
		0-191	Near to far		
13	Focus	0-191	Near to far		
14	Prism	0-31	No prism		
		32-255	prism		
15	Prism rotation	0-127	angle		
		128-191	Clockwise from fast to slow		
		192-255	Anti clockwise from slow to fast		
		0-99	No function		
		100-105	Off light		
		106-199	No function		
		200-205	On light		
		206-254	No function		
		255	Reset after 3 to 5 seconds		
		16	Reset	200-205	On light
				206-254	No function
255	Reset after 3 to 5 seconds				