
# LED Leko 200

Cool White and Warm White 200w LED Spot

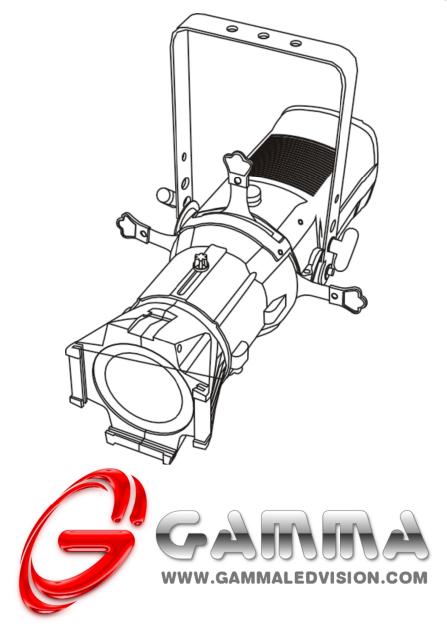

User Manual

# **Table of Contents**

1.	Introduction and Setup	3
	Unpacking and In the Box	3
	Mounting and Operation	3
	Features	3
	Safety Precautions	3
	Customer Support	5
2.	Setup and Operation	
	Using the LCD Menu and Buttons	
	DMX Setup	7
	DMX Basics	7
	DMX Wiring	7
	DMX Modes and Configuration	8
3.	Maintenance	10
	Routine Maintenance	10
	Troubleshooting Problems	10
4.	Technical Specifications	11
	Photometric Reports	

# 1. Introduction and Setup

# **Unpacking and In the Box**

Thank you for choosing our LED Leko 200 CW/WW. For your own safety, please read this manual before installing or using the device. This manual covers the important information on installation and applications. Please install and operate the fixture with following instructions. Meanwhile, please keep this manual for future needs.

In the box you will receive:

LED Leko 200 CW/WW: 1DMX Cable: 1Power Cable 1User Manual 1

# **Mounting and Operation**

Use a clamp rated for the full weight of the LED Leko 200 to hang the fixture from the mount(s) on the fixture's yoke.

As an added safety measure be sure to attached at least one properly rated safety cable to the fixture using on of the safety cable rigging point integrated in the base assembly or on the yoke.

#### **Features**

- 200w Cool White and Warm White Leko
- Multiple Lens Options Available 19°/26°/36°/50°

# **Safety Precautions**

Caution: For added protection mount the fixtures in areas outside walking paths, seating areas, or in areas were the fixture might be reached by unauthorized personnel.


Before mounting the fixture to any surface, make sure that the installation area can hold a minimum point load of 10 items the device's weight.

Fixture installation must always be secured with a secondary safety attachment, such as an appropriate safety cable.

Do not clamp the safety cable to the U bracket or clamp. That is not a secondary safety point.

A secondary safety point is any point that will adequately hold the led profile spotlight if the clamp fails.

Then the safety cable would be the backup and stop the fixture from falling to the ground. So do NOT fix the safety cable to the same place that the "C"clamp is attached

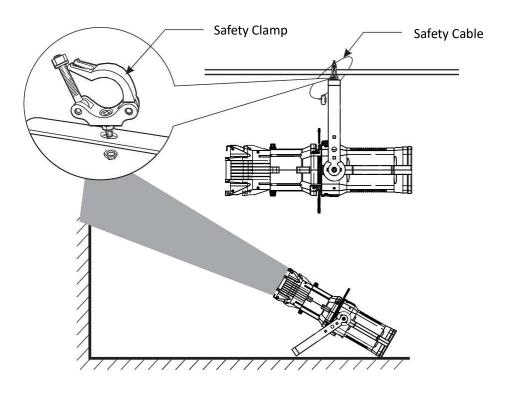

Never stand directly below the device when mounting, removing, or servicing the fixture.

From a ceiling, or set on a flat level surface (see illustration below). Be sure this fixture is kept at least 0.5m (1.5ft) away from any flammable materials (decoration etc.).

Always use and install the supplied safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails.

- •Don't try to modify the fixture without any instruction by the manufacturer or the appointed repairing agencies.
- ·Warranty is voided if there are any malfunctions from not following the user manual while operating or any hazardous operation, like shock short circuit, electronic shock, lamp broken, etc.

# **Customer Support**

#### WARRANTY POLICY

GAMMA LED Vision warrants its products for the periods set below from the date of purchase to be free of manufacturer and workmanship defects. Warranty does not cover normal wear and tear caused by force, negligence or misuse of products. GAMMA LED Vision is not responsible for any damages or injury caused by misuse or improper handling of the products and in accordance with instructions and specifications of manual.

Warranty terms are as follows:

LED Fixtures:

Indoor: 2 Years

Outdoor (IP 54 or higher): 1 Year

Lamp Fixtures: 1 year / excludes the lamp

LED Video Products:

Indoor: 2 Years

Outdoor (IP 54 or higher): 1 Year

Controllers: 2 years

Batteries: 6 months

All Trussing Related Products and Accessories: 1 Year

Please visit WWW.GAMMALEDVISON.COM for complete Limited Warranty terms and contact information.

# 2. Setup and Operation

# **Using the LCD Menu and Buttons**

Menu	Sub Menu	Display	Key Operation
Standard channel mode		DMX(5CH)	Press UP/DOWN to change the DMX address for
(5 channel)		Addr:001	the channel mode selected.
Basic channel mode		DMX(2CH)	Press UP/DOWN to change the DMX address for
(2 channel)		Addr:001	the channel mode selected.
C:	5.	St. II	D ((1) (1) (1) (1) (1)
Static mode	Dimmer	Static > Warm:000	Press "UP/DOWN" to change brightness of Warm White LFD.
	(warm white)	warm:000	Press "ENTER" change to sub menu
	Dimmer	Static >	Press "UP/DOWN" to change
	(cool white)	Cool:000	brightness of cool white LED.
	(000:)	000000	Press "ENTER" change to sub menu
	Strobe	Static >	Press UP/DOWN to change the speed of strobe
		Strob:00	Press "ENTER" change to sub menu
Temperature control	The current	Temp >	Press "ENTER" change to sub menu
	temperature	Curr: 0	
	Setting	Temp >	Press UP/DOWN to change the
	protection	Top :080	temperature Press "ENTER" change to sub
	of		menu
Revert to default settings	temperature	Reset	Press "ENTER" , and press password as below
Revert to default settings		Reset	Piess ENTER , and piess password as below
		Reset	Press UP/DOWN to input password, each time
		Pwd:	you press the password, it will show "*"
		Reset	Press "ENTER" to confirm password. It will
		Pwd:****	revert to default setting once the password is
			correct, otherwise it will delete all the "*"

# **DMX Setup**

#### **DMX Basics**

DMX512 stands for digital multiplex 512. This means that 512 channels are controlled digitally through 1 data cable.

A channel is a set of 255 steps that are assigned to control attributes in each light. This may be a color like red, green or blue, and intensity, strobe, pan/tilt or other attributes.


Multiple sets of 512 "universes" may be used. Only 1 universe will travel on a DMX cable, but through networked DMX (Art-Net or sACN E1.31), many universes can travel over a network.

#### **DMX Wiring**

DMX works by connecting 1 or multiple lights to the output of a DMX lighting console or software with a DMX interface.

DMX lights connect in what is called a "daisy-chain". Your first DMX cable will plug it's male DMX connector into the female DMX connector on your lighting console. The remaining female connector will then connect to the DMX input on your first light.


You may then connect your next fixture to the output of your first light, and continue the chain.

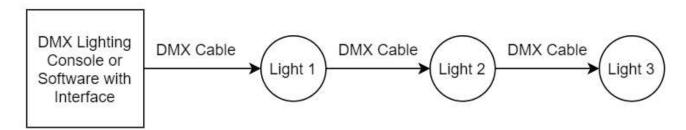


**32 Fixture Rule** – DMX only allows you to connect up to 32 fixtures in a single daisy chain for signal strength. Sometimes, depending on the fixtures and cable length, this number is less (or more).

DMX Cables can be 3-pin or 5-pin. These use the same type of data, and in the 5-pin only pins 1, 2, and 3 are used. The cable should be a 2 conductor, shielded cable of at least 110 ohms resistance. Microphone cable is not DMX cable.

Please refer to the diagram below:

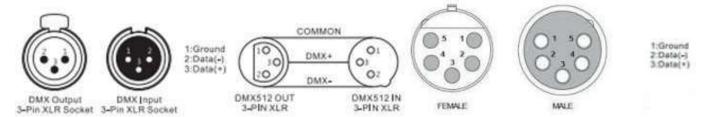

For installations where the DMX cable has to run a long distance or is in an electrically noisy environment, it is recommended to use a DMX terminator. This helps in preventing corruption of the digital control signal by electrical noise and reflections. The DMX terminator is simply an XLR plug with a 120  $\Omega$  resistor connected between pins 2 and 3, which is then plugged into the output XLR socket of the last fixture in the chain. Please see illustrations below:

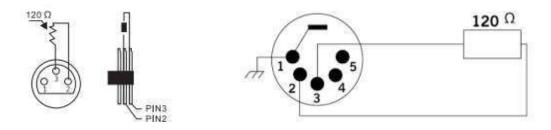

## **DMX Modes and Configuration**

The LED Leko 200 has multiple DMX modes, sometimes called "personalities", "profiles", or as we will use here "modes".

In general, modes with more DMX channels offer a greater level of control or options but take up more of your output channels on your lighting console or software.

Modes with less DMX channels often offer less control, but may be plenty for your needs. Depending on your needs and control solution, you may not need channels for automated programs, strobes, or macros – your console may have great effects! In this case, you can use a lesser channel mode and fit more lights per DMX universe.

View the DMX mode charts below to find the mode that best suits your needs.

#### DMX Channel Mode Sheet:

On the left side of the sheet you will see the different modes and which channel corresponds to each function listed on the right in the given mode.

2CH Basic	5CH Standard	Function	Channel Value	Description
	1	Dimmer	0-255	Master Dimmer
1	2	Cool White	0-255	
2	3	Warm White	0-255	
	4	Dimmer Curve?	0-10	Default Delay of Dimmer (Softening)
			11-15	No Fade Softening
			16-255	Shortest to Longest Fade Softening
	5	Strobe	0-10	No Strobe
			11-255	Strobe, Slow to Fast

# 3. Maintenance

#### **Routine Maintenance**

#### Fan Cleaning

Periodically do a visual inspection of the fans. If they are dirty, power off the unit and use a small electronics vacuum to clean the fans out. Do not use a can of C02 or an Air Compressor. These will simply blow the dust into the unit and may leave other residue.

#### Front Lens and Shutter Blade Cleaning

The front lens should be cleaned so that light output is maintained. The shutter blades may also occasionally need cleaning.

With the light powered off, use a moist, lint-free cloth. Never use alcohol of solvents to clean the fixture.

Never spray any cleaners on the fixture.

# **Troubleshooting Problems**

The following are a few common problems that may occur during operation. Here are some suggestions for easy troubleshooting:

## A. The unit does not work:


- Check that the unit is plugged in to a working power connector.
- Press the menu button to confirm that the unit is powered on. If the screen does not light up, the unit has no power.


# **B.** Not Responding to the DMX Controller

- Check DMX cables to verify that they are plugged in and functional.
- Check the DMX address and mode does it match the address and mode patched in the lighting console or software?
- Plug the light directly into the DMX controller with a cable that you know is good. Unplug all other lights does it work?
- Try to use another DMX controller.

# 4. Technical Specifications

- 1\*200W COB LED CW/WW
- 50,000 hours life and low power consumption
- Color Rendering Index(CRI): 90
- Optimized high definition optical system for improved photometric performance and field uniformity
- Projector-quality, high contrast aspheric lens
- Glass reflector that removes greater than 90% infrared radiation (heat) and reflects greater than 95% of visible light
- Lens tube interchangeable with filed angles available for 19°/26°/36°/50°
- Housing made by high quality fireproof black ABS
- 4 Metal shutter blades.
- 0-100% Smooth and precise linear dimmer
- 25hz high speed shutter/strobe effect with variable speed
- 2/5 DMX channels USITT DMX-512
- DMX512, master-slave, and sound control or autooperation
- 4-Button LCD display
- PowerCon connector IN/OUT
- 3-Pin XLR connectors IN/OUT
- Low noise fan integrated with copper liquid cooling system
- -30~40°C Max ambient temperature
- IP20 protection rating
- Max. Power: 200W
- Dimensions: 640(D)\*186(W)\*394(H)mm
  Packing Size: 300(D)\*730(W)\*310(H)mm
- Net Weight: 7.13kgGross Weight: 9kg

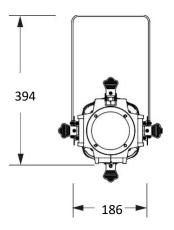

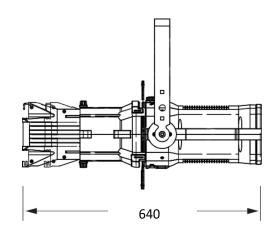

# **Photometric Reports**

Photometric Data – 26 Degree	FC at Center	
1m		
2m		402
3m		160
5m		49.7
7m		25.5

