

| 4 Channel Mode |          |         |
|----------------|----------|---------|
| Channel        | Function | Value   |
| 1              | Red      | 000-255 |
| 2              | Green    | 000-255 |
| 3              | Blue     | 000-255 |
| 4              | White    | 000-255 |

| 5 Channel Mode |          |         |
|----------------|----------|---------|
| Channel        | Function | Value   |
| 1              | Dimmer   | 000-255 |
| 2              | Red      | 000-255 |
| 3              | Green    | 000-255 |
| 4              | Blue     | 000-255 |
| 5              | White    | 000-255 |

| 7 Channel Mode |                              |         |                |
|----------------|------------------------------|---------|----------------|
| Channel        | Function                     | Value   |                |
| 1              | Dimmer                       | 000-255 |                |
| 2              | Red                          | 000-255 |                |
| 3              | Green                        | 000-255 |                |
| 4              | Blue                         | 000-255 |                |
| 5              | White                        | 000-255 |                |
| 6              | Strobe                       | 000-090 | Slow to fast   |
|                |                              | 091-173 | Dark to bright |
|                |                              | 174-255 | Bright to dark |
| 7              | Use menu setting Dimmer Mode | 000-010 |                |
|                | Dimmer off                   | 011-020 |                |
|                | Dimmer1                      | 021-030 |                |
|                | Dimmer2                      | 031-040 |                |
|                | Dimmer3                      | 041-050 |                |
|                | Dimmer4                      | 051-060 |                |
|                | Use menu setting Dimmer Mode | 061-254 |                |
|                | Reset                        | 255     |                |

| 9 Channel Mode |                  |         |
|----------------|------------------|---------|
| Channel        | Function         | Value   |
| 1              | Dimmer           | 000-255 |
| 2              | Red              | 000-255 |
| 3              | Green            | 000-255 |
| 4              | Blue             | 000-255 |
| 5              | White            | 000-255 |
| 6              | Strobe           | 000-255 |
| 7              | Show_Standby     | 000-110 |
|                | Show1-Show5      | 111-160 |
|                | Fade1-Fade5      | 161-210 |
|                | Show_Standby     | 211-255 |
| 8              | Speed            | 000-255 |
| 9              | CCT(3200K-6500K) | 000-127 |
|                | Colour(9 colour) | 128-255 |