

DMX CHARTS

Channel	Uno	Duo	Basic	Standard	Extended
1	DIMMER	DIMMER	DIMMER	DIMMER	DIMMER
2		CCT	WARM WHITE	DIMMER FINE	DIMMER FINE
3			COLD WHITE	STROBE	STROBE
4				CCT	CCT
5				CCT FINE	CCT FINE
6					CROSSFADE
7					WARM WHITE
8					WARM WHITE FINE
9					COLD WHITE
10					COLD WHITE FINE
11					CONTROL

Uno	Duo	Basic	Standard	Extended	Function	DMX Value	Default
1	1	1	1	1	DIMMER 0÷100%	000 ÷ 255	000
			2	2	DIMMER FINE	000 ÷ 255	000
			3	3	STROBE Close Strobe from slow to fast Open Pulse In from slow to fast Open Pulse Out from slow to fast Open Random from slow to fast Open	000 ÷ 001 002 ÷ 062 063 ÷ 064 065 ÷ 125 126 ÷ 127 128 ÷ 188 189 ÷ 190 191 ÷ 251 252 ÷ 255	255
	2		4	4	CCT 2700K - 2800K 2800K - 2900K 2900K - 3000K 3000K - 3100K 3100K - 3200K 3200K - 3300K 3300K - 3400K 3400K - 3500K 3500K - 3600K 3600K - 3700K 3700K - 3800K 3800K - 3900K 3900K - 4000K 4000K - 4100K 4100K - 4200K 4200K - 4300K 4300K - 4400K 4400K - 4500K 4500K - 4600K 4600K - 4700K 4700K - 4800K 4800K - 4900K 4900K - 5000K 5000K - 5100K 5100K - 5200K 5200K - 5300K 5300K - 5400K 5400K - 5500K 5500K - 5600K	000 ÷ 009 009 ÷ 018 018 ÷ 026 026 ÷ 035 035 ÷ 044 044 ÷ 053 053 ÷ 062 062 ÷ 070 070 ÷ 079 079 ÷ 088 088 ÷ 097 097 ÷ 106 106 ÷ 114 114 ÷ 123 123 ÷ 132 132 ÷ 141 141 ÷ 149 149 ÷ 158 158 ÷ 167 167 ÷ 176 176 ÷ 185 185 ÷ 193 193 ÷ 202 202 ÷ 211 211 ÷ 220 220 ÷ 229 229 ÷ 237 237 ÷ 246 246 ÷ 255	000
			5	5	CCT FINE	000 ÷ 255	000
				6	CROSSFADE from CCT to WW/CW 0÷100%	000 ÷ 255	000

		2		7	WARM WHITE 0÷100%	000 ÷ 255	000
				8	WARM WHITE FINE	000 ÷ 255	000
		3		9	COLD WHITE 0÷100%	000 ÷ 255	000
				10	COLD WHITE FINE	000 ÷ 255	000
				11	CONTROL No Function/Safe DISPLAY ON DISPLAY 10S DISPLAY 20S DISPLAY 30S FLIP DISPLAY ON FLIP DISPLAY OFF KEY LOCK ON KEY LOCK OFF DIMMER CURVE LINEAR DIMMER CURVE S-CURVE DIMMER CURVE SQUARE LAW DIMMER CURVE INVERSE SQUARE LAW DIMMER SPEED AUTO DIMMER SPEED FAST DIMMER SPEED MEDIUM DIMMER SPEED SLOW LED FREQUENCY 600HZ LED FREQUENCY 1200HZ LED FREQUENCY 2000HZ LED FREQUENCY 4000HZ LED FREQUENCY 6000HZ LED FREQUENCY 25KHZ FAN MODE AUTO FAN MODE SILENT FAN MODE HIGH FAN MODE OFF NO SIGNAL HOLD NO SIGNAL BLACKOUT NO SIGNAL STAND ALONE Reserved FACTORY DEFAULT OF CONTROL FUNCTIONS	000 ÷ 001 002 ÷ 003 004 ÷ 005 006 ÷ 007 008 ÷ 009 010 ÷ 011 012 ÷ 013 014 ÷ 015 016 ÷ 017 018 ÷ 019 020 ÷ 021 022 ÷ 023 024 ÷ 025 026 ÷ 027 028 ÷ 029 030 ÷ 031 032 ÷ 033 034 ÷ 035 036 ÷ 037 038 ÷ 039 040 ÷ 041 042 ÷ 043 044 ÷ 045 046 ÷ 047 048 ÷ 049 050 ÷ 051 052 ÷ 053 054 ÷ 055 056 ÷ 057 058 ÷ 059 060 ÷ 253 254 ÷ 255	000