

**DMX channel list -Vader Pro 350**

NEW

STD25CH				
1	pan	0~255		
2	pan fine	0~255		
3	tilt	0~255		
4	tilt fine	0~255		
5	colour wheel	0~7 8~15 16~23 24~31 32~39 40~47 48~55 56~63 64~71 72~79 80~87 88~95 96~103 104~221 222~238 239~255	no colour colour1 colour2 colour3 colour4 colour5 colour6 colour7 colour8 colour9 colour10 colour11 no colour colour Arbitrary positioning Rotate left Rotate right	
6	cyan	0~255		
7	magenta	0~255		
8	yellow	0~255		
9	colour temperature	0~255		
10	fix gobo	0~3 4~7 8~11 12~15 16~19 20~23 24~27 28~31 32~35 36~39 40~43 44~47 48~51 52~55 56~59 60~67 68~75 76~83	no gobo gobo1 gobo2 gobo3 gobo4 gobo5 gobo6 gobo7 gobo8 gobo9 gobo10 gobo11 gobo12 gobo13 no gobo gobo1 shake from slow to fast gobo2 shake from slow to fast gobo3 shake from slow to fast	

			84~91	gobo4 shake from slow to fast
			92~99	gobo5 shake from slow to fast
			100~107	gobo6 shake from slow to fast
			108~115	gobo7 shake from slow to fast
			116~123	gobo8 shake from slow to fast
			124~131	gobo9 shake from slow to fast
			132~139	gobo10 shake from slow to fast
			140~147	gobo11 shake from slow to fast
			148~155	gobo12 shake from slow to fast
			156~163	gobo13 shake from slow to fast
			164~167	no gobo
			168~211	Rotate left
			212~255	Rotate right
11	R-gobo		0~7	no gobo
			8~15	gobo1
			16~23	gobo2
			24~31	gobo3
			32~39	gobo4
			40~47	gobo5
			48~55	gobo6
			56~63	gobo7
			64~71	no gobo
			72~79	gobo1 shake from slow to fast
			80~87	gobo2 shake from slow to fast
			88~95	gobo3 shake from slow to fast
			96~103	gobo4 shake from slow to fast
			104~111	gobo5 shake from slow to fast
			112~119	gobo6 shake from slow to fast
			120~127	gobo7 shake from slow to fast
			128~135	no gobo
			136~195	Rotate left
			196~255	Rotate right
12	gobo rotation		0~3	no effect
			4~123	R-gobo angle
			124~187	rotate left
			188~191	stop
			192~255	rotate right
13	dimmer		0~255	
14	strobe		0~3	open
			4~67	strobe 1
			68~99	strobe 2
			100~131	strobe 3
			132~175	strobe 4
			176~247	strobe 5
			248~251	random strobe1
			252~255	random strobe2
15	dimer mode		0~63	Refresh rate 1200 auto

		64~127	Refresh rate 1200 fast
		128~191	Refresh rate 13672 auto
		192~255	Refresh rate 13672 fast
16	prism	0~31 32~255	no prism prism on
17	prism rotation	0~3 4~123 124~187 188~191 192~255	prism stop prism angle rotate left fast to slow stop rotate right slow to fast
18	zoom	0~255	
19	focus	0~255	
20	Auto focus distance (Reserved)	0~3 4~63 64~127 65~191 192~255	Do not use auto focus 5m 7.5m 10m 15m
21	Auto focus distance fine (Reserved)	0~255	Continuous adjustment within the above distance range
22	iris open	0~127 128~135 136~173 174~211 212~249 250~255	open to close close iris movement 1 iris movement 2 iris movement 3 close
23	frost	0~9 10~255	no effect liner frost
24	scan speed	0~255	fast to slow
25	control	0~19 20~29 30~39 40~49 50~59 60~69 70~74 75~79 80~84 85~89 90~94 95~99	no used reset all reset pan, tilt reset colour, gobo, CMY, CTO reset zoom, focus, prism, frost No effect display default display off (don't Keep after shutdown) display on (don't Keep after shutdown) fan speed low (Keep after shutdown) fan speed medium (Keep after shutdown) fan speed high (Keep after shutdown)
Please hold the value for more than 8 seconds to take effect, and then return to 0 to avoid repeated activation.			