

Instruction Manual

PROFESSIONAL SHOW LIGHT

LED XP-700 Zoom



DMX CHANNEL MODE:

Reduced Mode	Standard Mode	Value	Function
1	1	000-255	Master dimmer
2	2	000-010	Off
		011-110	Strobe fast-slow
		111-115	Open
		116-165	Pulse strobe1 slow-fast
		166-170	Open
		171-220	Pulse strobe 2 slow-fast
		221-230	Open
		231-245	Random strobe
246-266	Open		
3	3	000-255	Pan
*	4	000-255	Pan fine
4	5	000-255	Tilt
*	6	000-255	Tilt fine
*	7	000-255	Pan/Tilt speed fast-slow
5	8	000-255	8° -60° Zoom
6	9	<Color Macro >	
		207-255	Alice Blue
		191-206	Congo Blue
		184-190	Dark Steel Blue
		180-183	Deep lavender
		179	Lilac Tint
		175-178	Daylight Blue
		174	Flame Red
		172-173	Bastard Amber
		168-171	Deep Orange
		162-167	Pale Gold
		157-161	Apricot
		151-156	Bright Blue
		149-150	Primary Green
		147-148	Special lavender
		146	Pale Lavender
		145	Deep Golden Amber
		142-144	Medium Blue
		138-141	Bright Pink
		137	Mauve
134-135	Dark Green		
131-133	Leaf Green		
129-130	Dark Blue		
128	Light Blue		
127	Steel Blue		
126	Med Blue Green		

		125 123-124 121-122 120 119 118 117 115-116 114 113 112 110-111 100-109 089-099 078-088 068-077 062-067 049-061 046-048 045 035-044 032-034 031 030 029 027-028 023-026 020-022 019 018 017 016 015 014 013 012 011 010 000-009	Peacock Blue Magenta Dark Pink Middle Rose Light Salmon English Rose Light Rose Orange Deep Amber Straw Light Amber Spring Yellow Dark yellow green Just Blue Sky Blue Lavender Light Lavender Pink Carnation Medium Pink Light Pink Sunrise Red Dark Amber Gold Amber Medium Amber Fire Surprise Peach Straw Tint Medium Yellow Black White 5000°K White 3700°K White 7000°K Magenta Yellow Cyan Blue Green Red No function
7	10	000-255	CCT
8	11	133-255 010-132 000-009	Built-in programs Slow-Fast Fast->Slow Open
9	12	000-255	Red color intensity
10	13	000-255	Green color intensity
11	14	000-255	Blue color intensity

12	15	000-255	White color intensity
13	16	072-255	No function
		064-071	Backlight Off
		056-063	Backlight On
		010-055	Reset

Rigging the fixture

Caution: Fixture may cause severe injuries when crashing down! If you have doubts concerning the safety of a possible installation, do not install the moving head!

Before rigging make sure that the installation area can hold a minimum point load of 10 times the fixture's weight.

When installing the device, make sure there is no highly inflammable material (decoration articles, etc.) in a distance of min. 1.0 m.

CAUTION!


Use an appropriate clamp to ring the fixture on the truss.

Follow the instructions mentioned at the bottom of the base.

Make sure that the device is fixed properly! Ensure that the structure (truss) to which you are attaching the fixtures is secure.

Securing the fixture via one safety wire

Securing the fixture via two safety wires

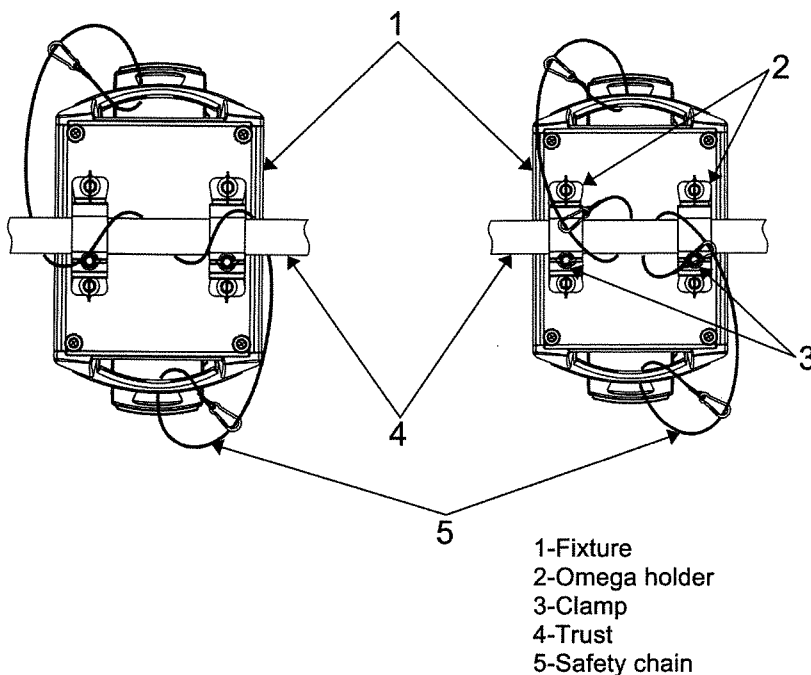

Cleaning

Due to fog residue, smoke, and dust cleaning the internal and external optical lenses must be carried out periodically to optimize light output.

1. Use normal glass cleaner and a soft cloth to wipe down the outside casing.
2. Clean the external optics with glass cleaner and a soft cloth every 20 days.
3. Always be sure to dry all parts completely before plugging the unit back in.