

10-CH Mode

CHANNEL	VALUE	FUNCTION
1	000 ⇄ 255	Master Dimmer 0%~100%
2	000 ⇄ 255	Red 0%~100%
3	000 ⇄ 255	Green 0%~100%
4	000 ⇄ 255	Blue 0%~100%
5	000 ⇄ 255	Amber 0%~100%
6	000 ⇄ 010 011 ⇄ 030 031 ⇄ 050 051 ⇄ 070 071 ⇄ 090 091 ⇄ 110 111 ⇄ 130 131 ⇄ 150 151 ⇄ 170 171 ⇄ 200 201 ⇄ 205 206 ⇄ 210 211 ⇄ 215 216 ⇄ 220 221 ⇄ 225 226 ⇄ 230 231 ⇄ 235 236 ⇄ 240 241 ⇄ 245 246 ⇄ 250 251 ⇄ 255	Color Macro No function Red 100%, Green (0~100%), Blue 0% Red (100~0%), Green 100%, Blue 0% Red 0%, Green 100%, Blue (0~100%) Red 0%, Green (100~0%), Blue 100% Red 0~100%, Green 0%, Blue 100% Red 100%, Green 0%, Blue (100~0%) Red 100%, Green (100~0%), Blue (0~100%) Red (100~0%), Green (100~0%), Blue 100% Red 100%, Green 100%, Blue 100%, Amber 100% White 1: 3,200 K White 2: 3,400 K White 3: 4,200 K White 4: 4,900 K White 5: 5,600 K White 6: 5,900 K White 7: 6,500 K White 8: 7,200 K White 9: 8,000 K White 10: 8,500 K White 11: 10,000 K
7	000 ⇄ 009 010 ⇄ 255	Strobe No function 1~20 Hz (slow~fast)
8	000 ⇄ 051 052 ⇄ 101 102 ⇄ 152 153 ⇄ 203 204 ⇄ 254 255 ⇄ 255	Auto Program No Function Auto 1 Auto 2 Auto 3 Auto 4 Auto 5
9	000 ⇄ 255	Auto Program Speed (only when CH.7 is between 052~255) 0%~100% (slow~fast)
10	000 ⇄ 051 052 ⇄ 101 102 ⇄ 152 153 ⇄ 203 204 ⇄ 255	Dimmer Speed Default dimmer speed Linear dimmer Non-linear dimmer 1 Non-linear dimmer 2 Non-linear dimmer 3