

**Display Instruction:**

Rotate the button to choose the right function and the press the center to confirm

DMX address= /Address=XXX

/Exit/ DMX /Address/ DMX Address=XXX

Parameter setting --back

Control mode --Standard mode

Model choice --(Extended mode

--(model serous)

Option --back

--/X Reverse --No

--/Y Reverse --Yes

--/Z Reverse --No

--/XY Exchange --Yes

--/XY Exchange --No

--/Dimmer Reverse --No

--/Dimmer Reverse --Yes

--/iris Reverse --No

--/iris Reverse --Yes

--/turn shortest --No

--/turn shortest --Yes

--DMX/DMX reset --No

--DMX/DMX reset --Yes

/Display --back

--/Language

--/Language --Chinese

--/Language --English

Manual Control --/back (some model have this function)

--ch1 0-255

--ch2 0-255

--ch3 0-255

--ch4 0-255

--ch5 0-255

--ch6 0-255

--ch7 0-255

--ch8 0-255

--ch9 0-255

--ch10 0-255

--ch11 0-255

--ch12 0-255

--ch13 0-255

--ch14 0-255

--ch15 0-255

--ch16 0-255

/Test operation --/back

--/Sound --/program run

--/Auto --/program run

/Resume default --/back

--/enter

/Fixture reset --/back

--/enter

Prompt message:


/Link error

/system reset

# 230W 280W

## BEAM 光束灯

### 使用手册 USER MANUAL

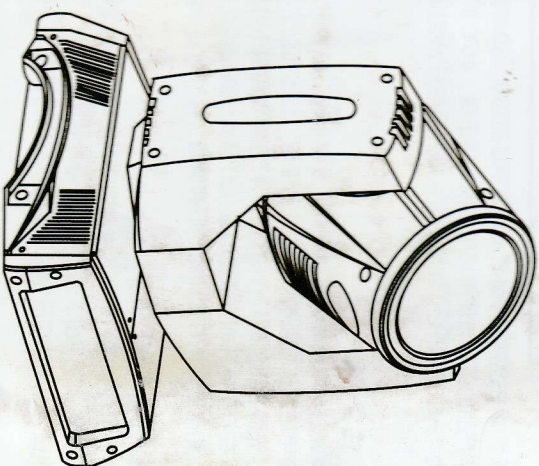

(使用前请仔细阅读说明书)

PLEASE READ THIS CAREFULLY BEFORE USE!