

**DMX Mode:** Operating through a DMX controller give the user the freedom to create their own programs tailored to their own individual needs. This function also allows you to use your fixtures as spot lights.

1. This function will allow you to control each individual fixture's traits with a standard DMX 512 controller.
2. The fixture uses 11/16/17/38 DMX channels (RGBW version) to operate. Please see "DMX Values and Functions" for the DMX traits.
3. To run your fixture in DMX mode, plug in the fixture via the XLR connections to any standard DMX controller. Set your desired DMX address following the setup specifications that come with your DMX controller.

**Art-Net Mode;** How to set the display ?

1. Press display button Confirm to use Up/Down keys to select Network. Press Confirm to select Protocol, use keys Up/Down to select Art-Net.
2. Press display button Confirm to use Up/Down keys to select Network. Press Confirm to select Universe, use keys Up/Down to select 000.
3. Don't need to set IP address value and Subnet Mask.

**KlingNet Mode:** How to set the display ?

1. Press display button Confirm to use Up/Down keys to select Network. Press Confirm to select KlingNet, use keys Up/Down to select Enable..

**sACN Mode:** How to set the display?

1. Press display button Confirm to use Up/Down keys to select Network. Press Confirm to select Protocol, use keys Up/Down to select sACN.
2. Press display button Confirm to use Up/Down keys to select Network. Press Confirm to select Universe, use keys Up/Down to select 001.
3. Be sure set IP Address value be 000.000.000.000
4. Don't need to set Subet Mask


**DMX Profile**

Standard Mode	Extend Mode	GUI Mode	HSI Mode	Value	DMX Channel
1	1	1	1	000-255	Pan
2	2	2	2	000-255	Pan Fine
3	3	3	3	000-255	Tilt
4	4	4	4	000-255	Tilt Fine
5	5	5	5	000-255	Pan/Tilt Speed
6	6	6	/	000-255	Dimmer
7	7	/	/	000-255	Dimmer Fine
8	8	7	6	Strobe	
				000-003	Close
				004-103	Slow - Fast
				104-107	Open
				108-207	Pulse Strobe, Slow-Fast
				208-212	Open
				213-225	Random Strobe Slow
				226-238	Random Strobe Medium
				239-251	Random Strobe Fast
				252-255	Open
9	/	8	/	000-255	Red Intensity
10	/	9	/	000-255	Green Intensity
11	/	10	/	000-255	Blue Intensity
12	/	11	/	000-255	White Intensity
/	/	/	7	000-255	Hue
/	/	/	8	000-255	Saturation
/	/	/	9	000-255	Intensity
/	9	/	/	000-255	LED1 Red
/	10	/	/	000-255	LED1 Green
/	11	/	/	000-255	LED1 Blue
/	12	/	/	000-255	LED1 White
/	13	/	/	000-255	LED2 Red
/	14	/	/	000-255	LED2 Green
/	15	/	/	000-255	LED2 Blue
/	16	/	/	000-255	LED2 White
/	17	/	/	000-255	LED3 Red
/	18	/	/	000-255	LED3 Green
/	19	/	/	000-255	LED3 Blue
/	20	/	/	000-255	LED3 White
/	21	/	/	000-255	LED4 Red
/	22	/	/	000-255	LED4 Green
/	23	/	/	000-255	LED4 Blue
/	24	/	/	000-255	LED4 White

/	25	/	/	000-255	LED5 Red
/	26	/	/	000-255	LED5 Green
/	27	/	/	000-255	LED5 Blue
/	28	/	/	000-255	LED5 White
/	29	/	/	000-255	LED6 Red
/	30	/	/	000-255	LED6 Green
/	31	/	/	000-255	LED6 Blue
/	32	/	/	000-255	LED6 White
/	33	/	/	000-255	LED7 Red
/	34	/	/	000-255	LED7 Green
/	35	/	/	000-255	LED7 Blue
/	36	/	/	000-255	LED7 White
13	/	/	/	000-255	CCT
14	/	12	/	000-255	Marco
/	/	13	/	Shape	
				000	Close
				001-006	LED 1
				007-013	LED 2
				014-020	LED 3
				021-027	LED 4
				028-034	LED 5
				035-041	LED 6
				042-048	LED 7
				049-055	2 LED pattern 1
				056-062	2 LED pattern 2
				063-069	2 LED pattern 3
				070-076	3 LED pattern 1
				077-083	3 LED pattern 2
				084-090	3 LED pattern 3
				091-097	2 LED pattern 4
				098-104	1 LED pattern
				105-111	2 LED pattern 5
				112-118	Linear pattern 1
				119-125	3 Points flower pattern
				126-132	X Shape effect 1
				133-139	Circle Shape effect
				140-146	1 LED tracking effect 1
147-153	2 LED tracking effect 1				
154-160	2 LED tracking effect 2				
161-167	3 LED tracking effect 1				
168-174	3 LED tracking effect 2				
175-181	3 LED tracking effect 3				

				182-188	1 LED tracking effect 2
				189-195	2 LED tracking effect 3
				196-202	Linear pattern 2
				203-209	X Shape effect 2
				210-216	Custom Pattern 1
				217-223	Custom Pattern 2
				224-230	Custom Pattern 3
				231-237	Custom Pattern 4
				238-244	Custom Pattern 5
				245-255	Rainbow effect
/	/	14	/	000-255	Wave Effect Speed
				Effect	
				000	Close
15	/	/	/	001-100	Dream Effect
				101-200	Wave Effect
				201-255	None
/	/	15	/	000-255	ShapeBack Colors
		16		000-255	Back dim
16	37	17	10	000-255	Zoom
				Reset/Program	
				000-059	None
17	38	18	11	060-099	All Reset
				100-200	Auto-run
				201-255	None

## Dimension(mm)

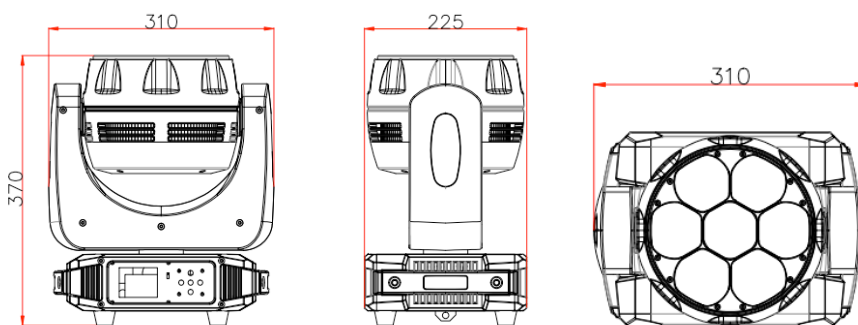

## Rigging the fixture

**Caution:** Fixture may cause severe injuries when crashing down! If you have doubts concerning the safety of a possible installation, do not install the moving head!

Before rigging make sure that the installation area can hold a minimum point load of 10 times the fixture's weight.

When installing the device, make sure there is no highly inflammable material (decoration articles, etc.) in a distance of min. 1.0 m.